


9. Insert tube over nozzle




10. Insert connector on tube



11. Cartridge assembled

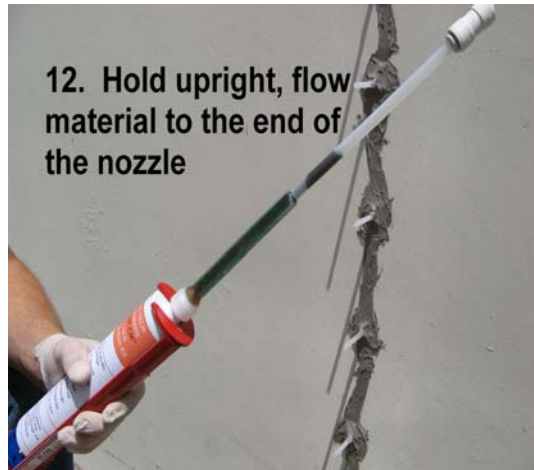

12. Hold upright, flow material to the end of the nozzle

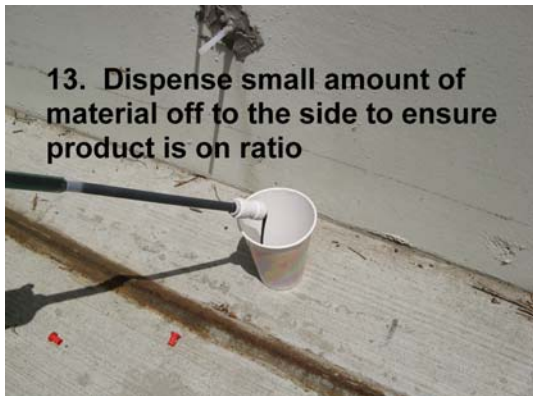

13. Dispense small amount of material off to the side to ensure product is on ratio



14. Insert connector on to port



15. Flow material until it comes out of port above



16. Cap the first port, then continue upwards - port to port